



Commissioning Adjustments


Note: Commissioning adjustments can be done only by a licensed tradesperson.

Lighting the Water Heater

The water heater must be filled with water before lighting. Instructions for lighting procedure are on the inside of the access cover and shown below:

1. Turn the knob fully clockwise to the "•" (off) position.
2. Wait five (5) minutes so any build-up of unburnt gas can escape.
3. Turn the knob to the ★ (pilot) position.

Thermostat and gas control knob

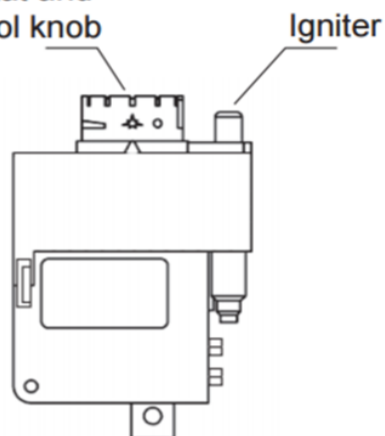

4. Depress the knob fully (until ★ disappears below housing) and after thirty (30) seconds, whilst keeping the knob depressed, repeatedly press the igniter button (for up to 40 seconds) until the pilot flame ignites.
Note: It is not possible to depress the knob fully if the gas control has activated its safety shut-off feature. In this case, wait 60 seconds for the gas control to reset.
5. Keep the knob depressed for twenty (20) seconds after the pilot flame lights. The pilot flame can be observed if a mirror is placed directly below the pilot assembly.
6. Release the knob and check if the pilot is still alight.
7. If pilot has failed to light or has not remained alight, turn gas control knob to "•" (off). Wait five (5) minutes for the escape of unburnt gas, then begin again at step 3.
8. When the pilot flame remains alight with the knob released, turn the knob anticlockwise to one of the number settings. A setting of "6" is recommended and this will give a water temperature of about 60°C.



Commissioning Adjustments

9. Turn the knob to a higher number for higher water temperatures or a lower number for lower water temperatures.
10. Set the test point pressure as per page 12.
11. Replace the access panel and ensure that it is firmly in position before operating the appliance.
12. If the burner does not light at the selected setting, the water may already be at the selected temperature.

Warning: Do not attempt to light if the pilot is out and the knob is in the "ON" position (one of the number settings). Follow steps above.

Shutting Down The Water Heater

1. Turn the knob to "•" (off) position.
2. Turn water off at water isolating valve.

Turning Off Gas To The Appliance

1. Turn the knob to "•" (off) position.
2. Turn off the gas isolation valve.

To maintain safety and efficiency this heater should be serviced annually by an authorised service agent.
